


2 Volume Pot / 2 Tone Pot Wiring with independent volume controls

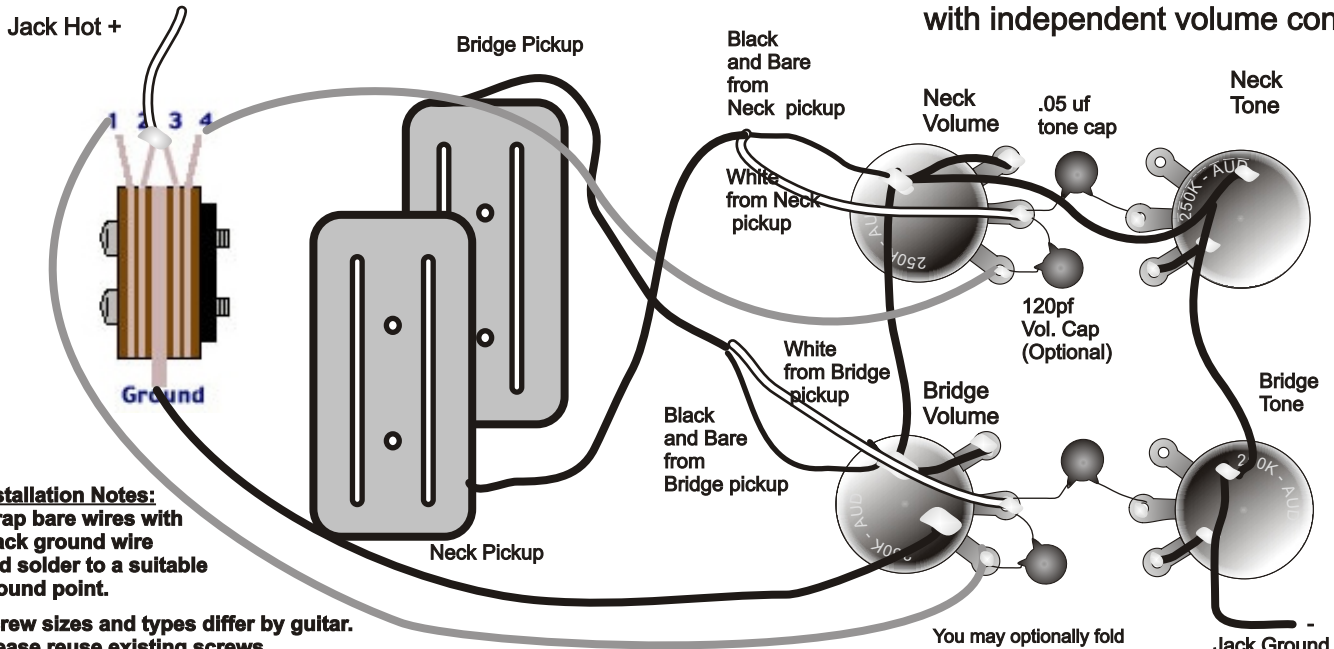

Installation Notes:
Wrap bare wires with black ground wire and solder to a suitable ground point.


Screw sizes and types differ by guitar. Please reuse existing screws.

Exercise care when installing mounting screws. Insert screw straight down. Do not angle screws toward coils when installing.

You may optionally fold back the tab to contact the pot body and solder to create a ground


See other Side for other important info

1 Volume Pot / 1 Tone Pot Wiring

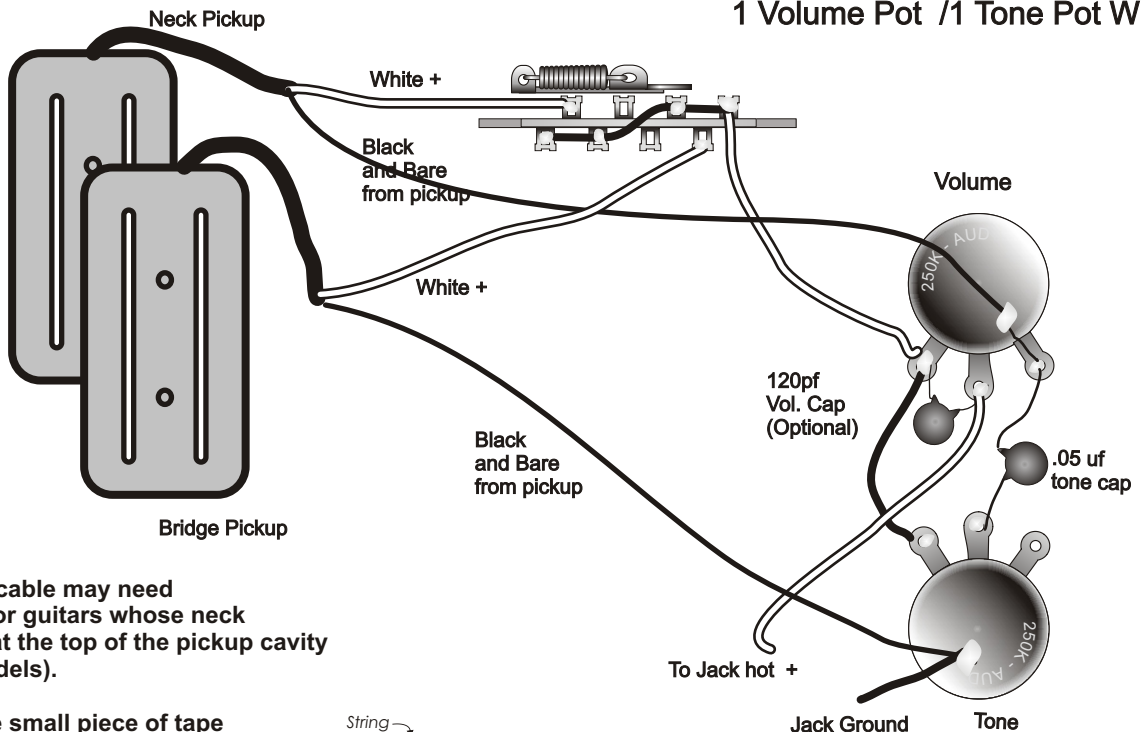

The Neck pickup cable may need to be redirected for guitars whose neck cable channel is at the top of the pickup cavity (e.g. Les Paul models).

To do this remove small piece of tape securing the cable, unfold cable, and redirect cable toward cable channel as may be required. This ensures proper North/South orientation of neck and bridge pickups to each other. (North magnets toward heel of guitar).

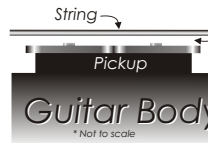

Width between string and pickup rails should begin at 4-5/32" on the bass side and 2-3/32" on the treble side while guitar is fretted at higher frets.