





T-Style Wiring with Fender S1 Switch

This wiring diagram incorporates Fender's™ S1 switch as may be installed on your Fender Telecaster™. The S1 switch is proprietary to Fender and is not provided by JBE.

Engaging the S1 switch when in the middle position of your 3 way pickup selector switch, enables you to put the two pickups in series with each other providing a darker tone, some mitigation of hum, and greater output.

We offer this wiring diagram as an accommodation to those players wanting to retain the S1 switch and series wiring. However, many Tele players find that the inherent benefits of JBE T-Style pickups overshadow the small added benefit of the S1 switch in JBE equipped guitars.

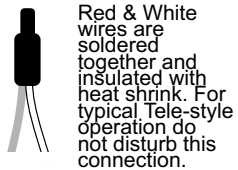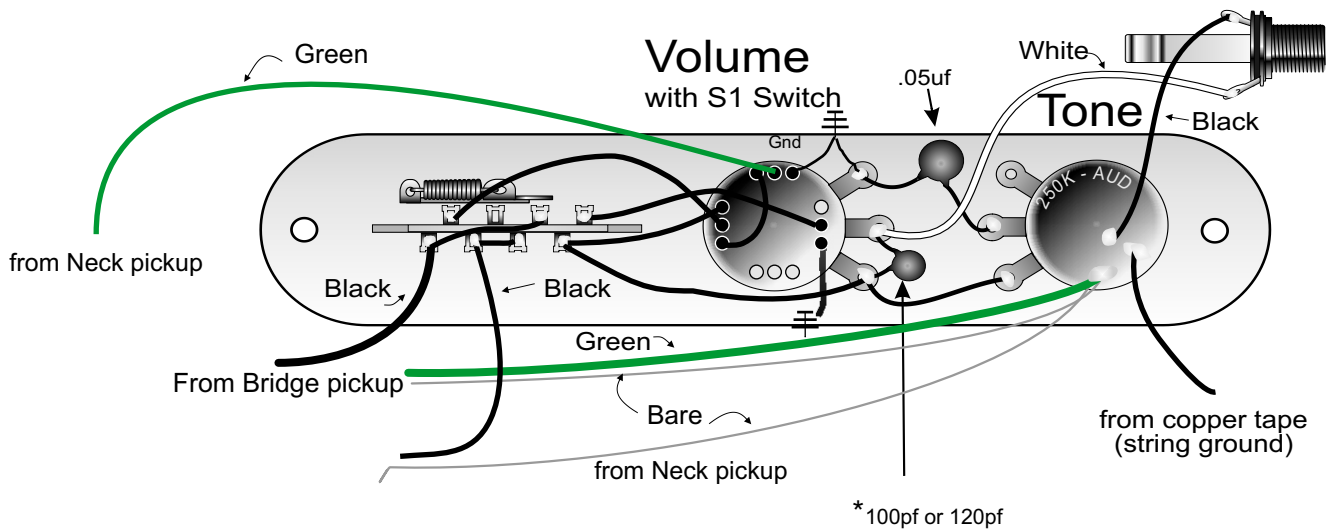

Red & White wires are soldered together and insulated with heat shrink. For typical Tele-style operation do not disturb this connection.

⊚ Ground point generally the top of the pot or pot body

Keep the bare wires from contacting other connections!

* This optional capacitor helps compensate for the natural loss of high frequencies through the guitar cord which sometimes occurs when the volume control is partially rolled back.

2010 Joe Barden Engineering™