J-Style Bass Pickups

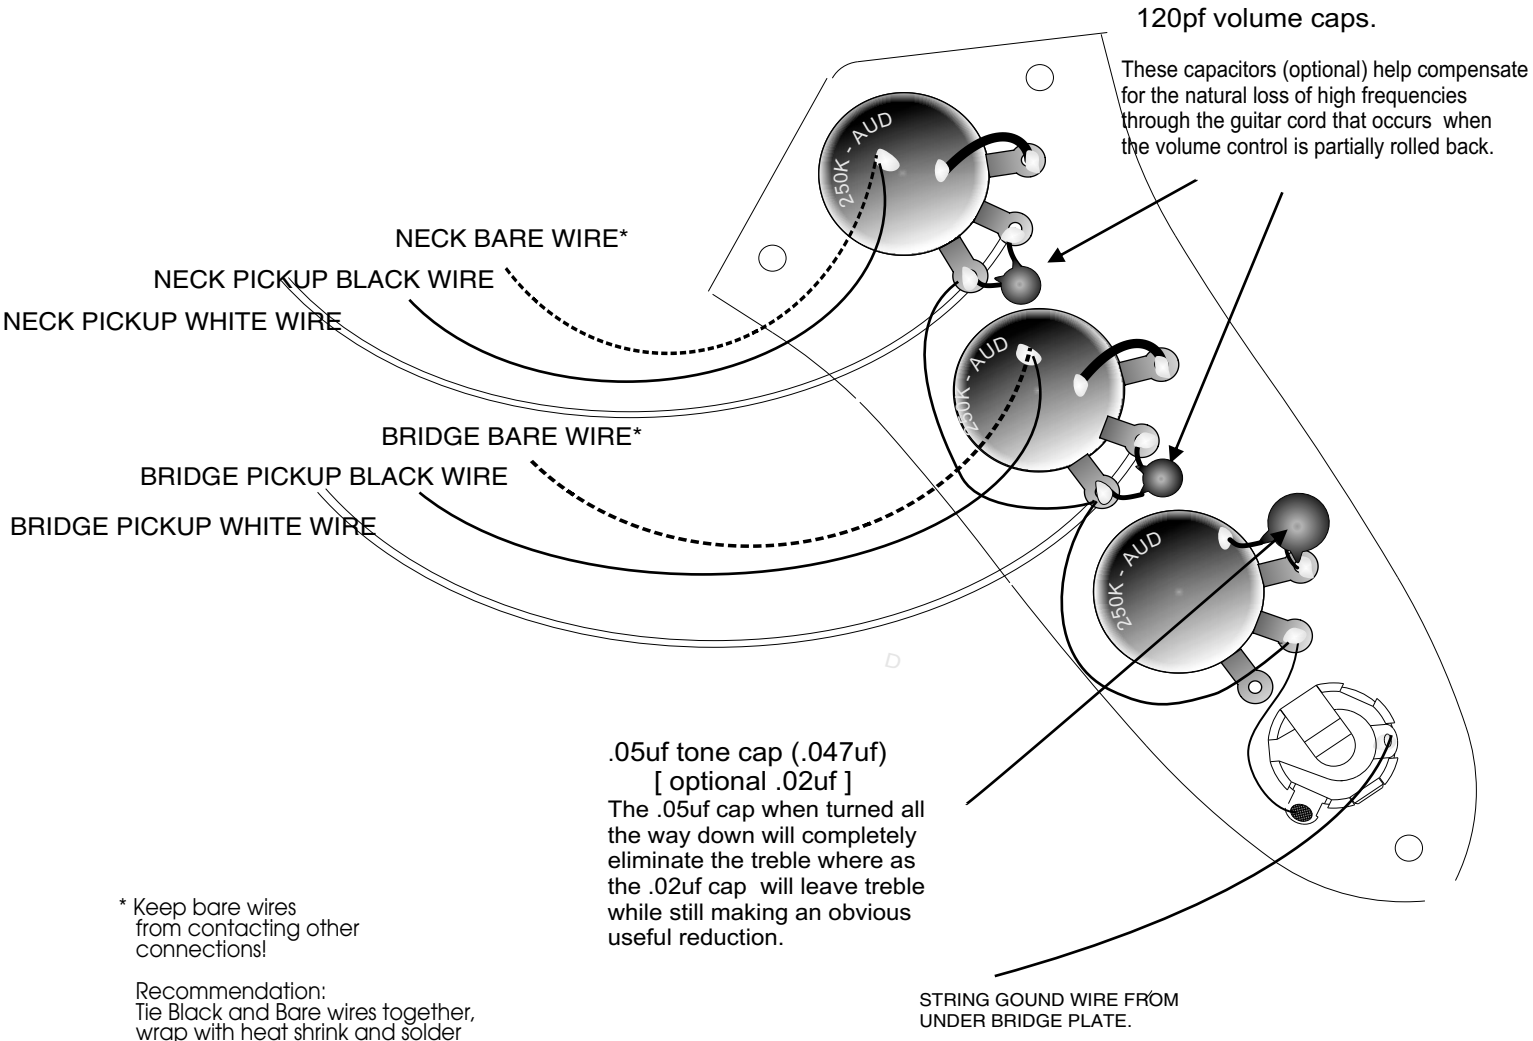

* Keep bare wires from contacting other connections!

Recommendation:
Tie Black and Bare wires together, wrap with heat shrink and solder to top of pot.

2007 Joe Barden Engineering